



HOLZKERN


SKYLINE
42 MM

Minute | Minute

Hour | Stunde

Second | Sekunde

 **Instructions | Anleitung**
www.holzkern.com/FAQ

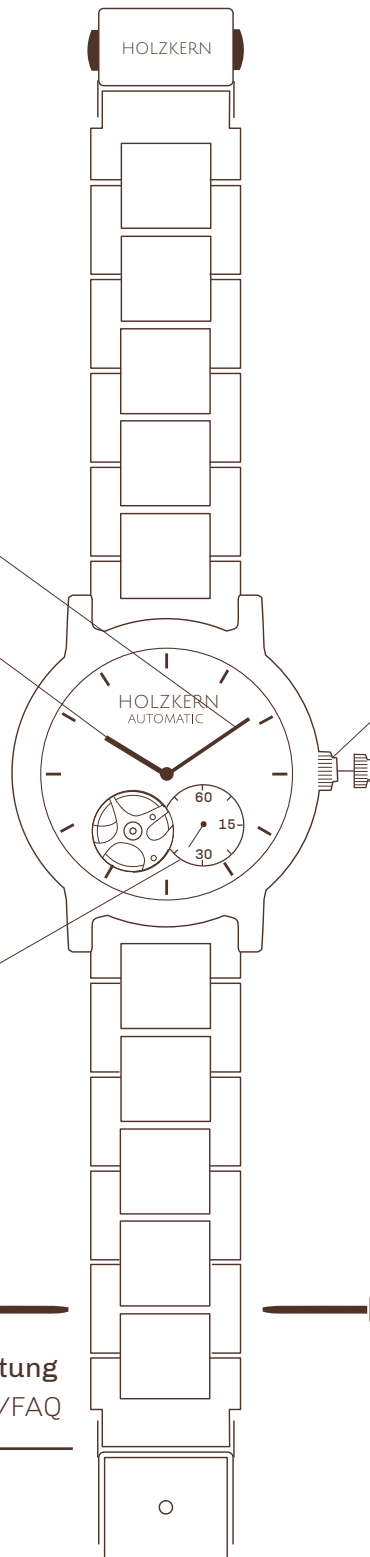

Normal position
Normalposition

1st click: time setting
1 Pos.: Zeiteinstellung

Winding the watch

Wind the movement by turning the crown clockwise 40 times prior to wearing it. The movement will also wind automatically through regular use; however, after many hours with-out being worn it may be necessary to wind the movement again.

Uhr aufziehen

Drehe die Krone 40 Mal im Uhrzeigersinn, bevor du deine Uhr zum ersten Mal anlegst und sie beginnt zu ticken.

Das Uhrwerk zieht sich nun durch deine Bewegung selbstständig auf. Sollte die Uhr mehr als 40 Stunden nicht getragen werden, wiederhole den Vorgang.

Movement | Uhrwerk

Automatic | Automatik
Citizen-Miyota 82S5

Case thickness | Gehäusehöhe

12 mm

Circumference | Umfang

Adjustable length | Größenverstellbar

Weight | Gewicht

145 g

Glass | Glas

Sapphire Crystal | Saphirglas

Backplate | Rückseite Gehäuse

Metal, glass | Metall, Glas

Water resistance | Wasserdicht

Splash-proof | Spritzwasserfest

Band width | Armbandbreite

22 mm

Band | Armband

Wood, metal | Holz, Metall
Screws | Schrauben



Accuracy / Day ±20-40 sec.
Genauigkeit / Tag ±20-40 Sek.



Running time 42 Hours
Laufzeit 42 Stunden